INSTALLATION INSTRUCTIONS

For Model # 27010 (REV.10/23/2003)

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

ASSEMBLING THE FIXTURE (Fig. 1)

1. Shut off power at the circuit breaker and remove old fixture from ceiling, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Determine desired distance from ceiling to hang the fixture, and if necessary, cut cord to length plus five inches. Run the Wired Cord (A) through the Cap Nut (G), Canopy (F), and Nipple. Then feed several inches of the cord end through the middle hole in the Crossbar (C).
4. Install the Stain Relief Bushing (B) by unscrewing the Screw (E) and pushing the cord through the center of both parts until about 5" of cord is exposed. Tighten screw from the Strain Relief Bushing (B). (You may need someone to hold the fixture while installing the Strain Relief Bushing.) The fixture can no hang from the Strain Relief Bushing (B).
5. Carefully cut and remove approximately 4" of the outer sheathing from cord and strip 1/2" of the wire ends bare to expose the copper strands.

CONNECTING THE WIRES (Fig. 2)

6. Attach the Crossbar (C) to the Outlet box in the ceiling with two screws (D). The side of the Crossbar with "GND" marked on it and two convex points must face out.
7. At this point, Connect the electrical wires as shown in Fig. 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's Ground Wire to it. Otherwise, connect the fixture's Ground Wire directly to the crossbar using the Green Screw provided.
8. Slip the Canopy (F) and Cap Nut (G) up to the ceiling and lock in place by threading the Cap Nut onto the Nipple.
9. Place Glass Shade (I) up to the Socket Cup (H) and secure with Screw Shell (J).
10. Install Light bulbs in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING)**.

Your installation is now complete. Return power to the outlet box and test fixture.

Fig. 1

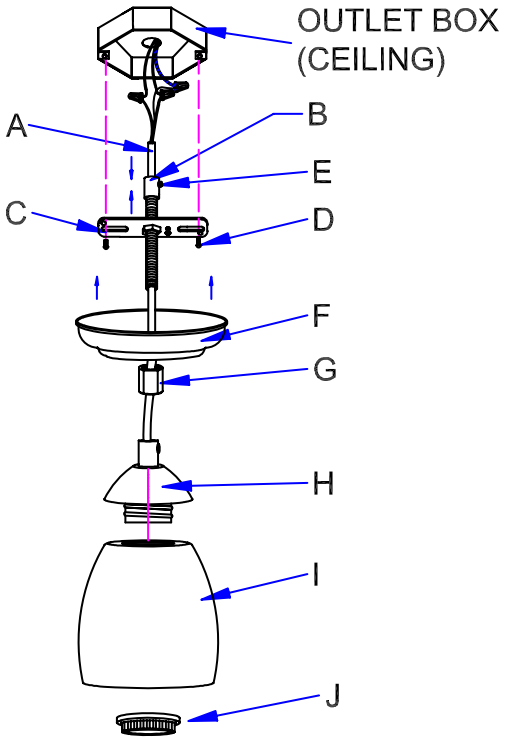

Fig. 2

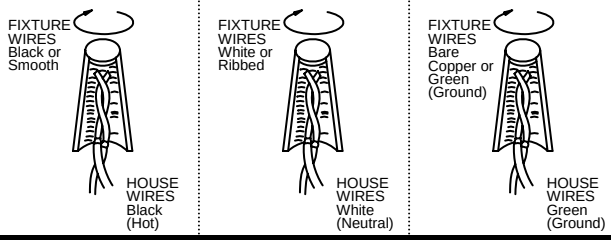
FIXTURE WIRES Black or Smooth
HOUSE WIRES Black (Hot)
FIXTURE WIRES White or Ribbed
HOUSE WIRES White (Neutral)
FIXTURE WIRES Bare Copper or Green (Ground)
HOUSE WIRES Green (Ground)

In the event that you should have any installation question or are missing parts, please contact **Customer Service**. Customer service may be reached weekdays a ***1-800-527-0998*** between the hours of 8:00am and 5:00pm PST (Pacific Standard Time).

The HAMPTON BAY FAN & LIGHTING Co.™

2455 PACES FERRY RD., N.W., ATLANTA, GA 30339

INSTRUCCIONES PARA LA INSTALACION

Para Modelo # 27010 (REV.10/22/2003)

ADVERTENCIA! CORTE LA CORRIENTE DESDE EL FUSIBLE O EL INTERRUPTOR CENTRAL

ENSAMBLAJE DE LA LAMPARA (Fig. 1)

1. Corte la corriente en el circuito principal y saque la lampara vieja incluyendo la barra transversal.
2. Desempaque cuidadosamente su nueva lampara y coloque todas las partes en una superfice despejada. Tenga cuidado de no perder las partes pequeñas que son necesarias para la instalacion.
3. Determine la distancia apropiada, para colgar la lampara corte el cordon electrico mas 5" pulgadas si es necesario. Pase los Alambres (A) dentro de la Boquilla de Seguridad (G), la Cubierta (F), y seguida por el Tubo. Meta algunas pulgadas de Cordon dentro del abujero de la Bara Transversal (C).
4. Ensamble la Boquilla de Seguridad (B) quitando el Tornillo (E) y metiendo el Cordon dentro el centro de las dos partes expuestas. Apriete el tornillo de la Boquilla de Seguridad (B). (Quizas assistencia necesaria de otra persona para detener la lampara mientras se ensambla la Boquilla de Seguridad.) La lampara no puede colgarse de la Boquilla de Seguridad solamente (B).
5. Cuidadosamente corte approximadamente 4" de la parte exterior del enfundador del cordon. Pele los alambres ½" y que las puntas de cobre esten expuestas.

CONECTANDO LOS ALAMBRES (Fig.2)

6. Tome el asemblaje de la barraTransversal (C) y montelo a la caja de union del techo use los tornillos (D) de la caja de Union, apriete bien los Tornillos. El lado marcado "GND" y las puntas Convexas deben quedar hacia afuera.
7. Conecte el alambrado electrico como se muestra en la (Fig.2), use un conector de plastico para asegurar la conexion. Si su caja de union tiene un alambre de tierra (verde o de cobre), conectelo al alambre de tierra de la lampara. Si no tiene, entonces conecte el alambre de tierra de la lampara directamente a la barra transversal usando el tornillo verde incluido.
8. Levante la Cubierta (F) y la Boquilla de Seguridad (G) sobre el techo y asegure la Cubierta (F) con la Boquilla de Seguridad al Tubo.
9. Ponga la pantalla de Vidrio (I) sobre el Socket (H) asegurelo con el Anillo del socket (J).
10. Instale los focos de acuerdo a las especificaciones. **NO EXCEDA MAS DE LOS VATIOS ESPECIFICADOS!!**

Su instalacion a terminado, conecte la corriente electrica y pruebe la lampara.

Fig. 1

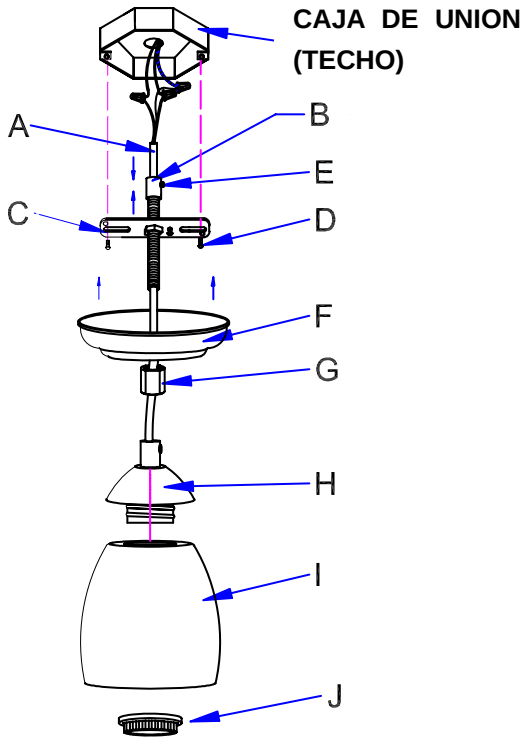

Fig. 2

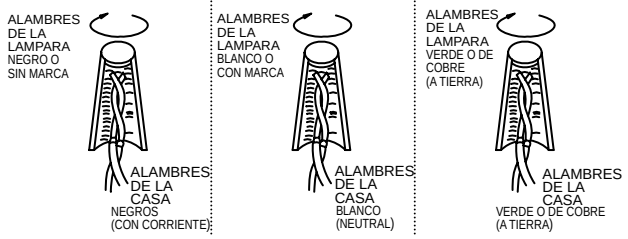
ALAMBRES DE LA LAMPARA NEGRO O SIN MARCA
ALAMBRES DE LA CASA NEGROS (CON CORRIENTE)
ALAMBRES DE LA LAMPARA BLANCO O CON MARCA
ALAMBRES DE LA CASA BLANCO (NEUTRAL)
ALAMBRES DE LA LAMPARA VERDE O DE COBRE (A TIERRA)
ALAMBRES DE LA CASA VERDE O DE COBRE (A TIERRA)

En caso de preguntas sobre la instalacion o le faltaron partes, porfavor hablar al departamento de **Servicio al Cliente** al **1-800-527-0998** de Lunes a Viernes de 8:00 a.m. a 5:00 p.m. PST (Tiempo del Pacifico).

2455 PACES FERRY RD., N.W., ATLANTA, GA 30339

LA-743E/S